


# USER MANUAL EchoChime300™ WIRELESS Home Alert System

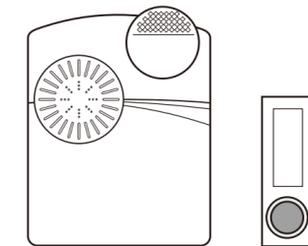

**MAINTENANCE**



- For best results, use good quality alkaline batteries.
- Always replace old or weak batteries.
- Keep doorbell dry. If wet, dry immediately.
- Do not use cleaning solvents on electronic products.
- Solvents contain chemicals that can damage circuitry. Use damp towel or cloth to clean. Dry immediately.
- Do not expose the bell unit to rain or immerse in water. It is not water resistant.

If the device is operated using a mains adapter, only use the Hearing Products International Ltd approved mains adapter. Do not use any other type of mains adapter.

**WARNING**

The user is cautioned that changes and modifications made to the equipment without the approval of Hearing Products International Ltd could void the user's authority to operate this equipment. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.

## PARTS & FUNCTION DOOR BELL

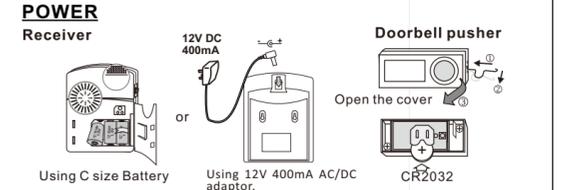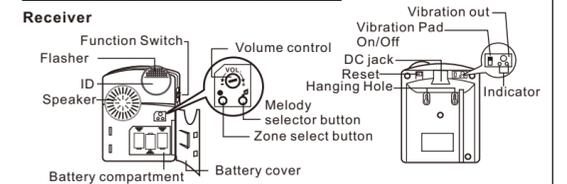

## CODE PAIRING & MELODY SELECTION


PLEASE NOTE THE BELL PUSH AND CHIME ARE PAIRED AND READY TO USE.

**Step 1:** Insert battery to the transmitter to be used (bell push).

**Step 2:** Insert batteries to the receiver to be used (chime unit).

**Step 3:** Enter pairing mode for receiver (chime unit). Press and hold the ● zone Select button for 3 seconds. The LED #1 will flash.

**Step 4:** Press the ● button again to move to the zone you wish to pair with. Press ♪ melody selector to scroll through the melodies. Once you hear your preferred melody, do not press again as it is now selected.

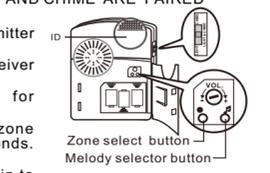

**Step 5:** Once the zone and melody are selected, press the bell push button once to pair. If successful, the receiver (chime) will generate a short tone. Press the ● button to exit pairing mode, the system is ready to use.

To stop the Chime whilst it is alerting press the reset button

**Clear the transmitter on the Chime memory**

First, press and hold the ● button for 3 seconds to enter the pairing mode. Press the ● button to move to the zone which is to be deleted. Press and hold the ● and ♪ buttons together for 3 seconds. The receiver will generate a tone to indicate the transmitter on this zone has been deleted.


**Change the melody in desired zone**

First, press and hold the ● button for 3 seconds to enter the pairing mode. Press the ● button to move to the zone then press the ♪ button to select the melody required. Press the ● button until the pairing mode is exited.

**Battery low indicator**

If a zone LED light is blinking, it indicates that the battery is low for this transmitter. You must replace the battery as soon as possible. If the white flash at the top of the Chime blinks every 5 seconds, this indicates the receiver batteries are low. You must replace the batteries of the receiver.

## BED SHAKER

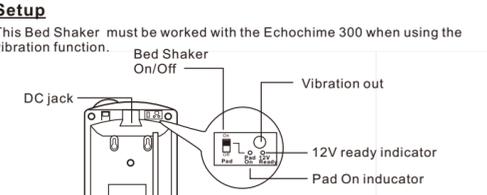


**DC Jack:** If using the Bed Shaker, it must be connected with a 12V 400mA AC/DC adaptor to this jack.

**12V ready indicator:** This indicator will light up, when the 12V adaptor is connected correctly.

**Bed Shaker on/off:** Slide this switch to turn on or turn off the vibration function.




**Pad on indicator:** If the Bed Shaker on/off switch is slide to on position, this LED indicator will light up to indicate vibration function is ready.

**Vibration out:** Plug the Bed Shaker to this jack.

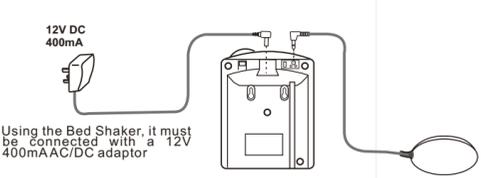

## VIBRATING PAGER

### PARTS & FUNCTION DOOR BELL

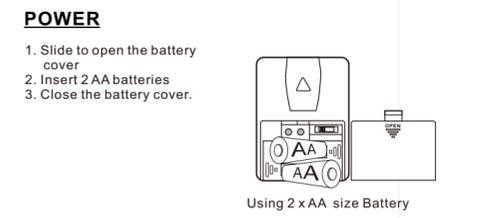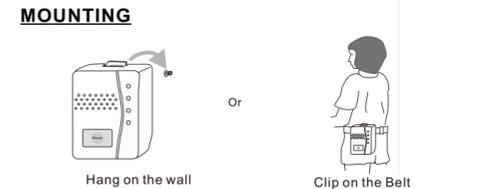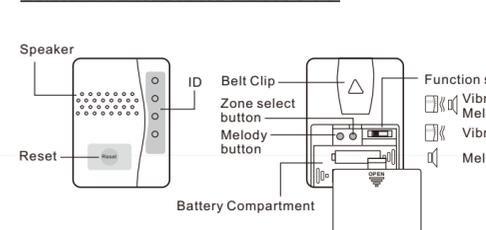

## CODE PAIRING & MELODY SELECTION

PLEASE NOTE THE BELL PUSH AND CHIME ARE PAIRED AND READY TO USE.

**Step 1:** Insert battery to the transmitter to be used (bell push).


**Step 2:** Insert batteries to the pager

**Step 3:** Enter pairing mode for receiver (pager unit). Press and hold the zone select button ● for 3 seconds. The LED #1 will flash.

**Step 4:** Press the ● button again to move to the zone you wish to pair with. Press ♪ melody selector to scroll through the melodies. Once you hear your preferred melody, do not press ● again as it is now selected.

**Step 5:** Once the zone and melody are selected with the zone icon flashing, trigger the transmitter once to pair. If successful, the receiver (pager) will generate a short tone. Press the ● button to exit pairing mode, the system is ready to use.

To stop the Chime whilst it is alerting press the reset button

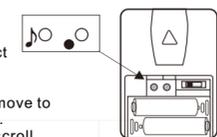

**Clear the transmitter on the Chime memory**

First, press and hold the ● button for 3 seconds to enter the pairing mode. Press the ● button to move to the zone which is to be deleted. Press and hold the ● and ♪ buttons together for 3 seconds. The receiver will generate a tone to indicate the transmitter on this zone has been deleted.





**Change the melody in desired zone**

First, press and hold the ● button for 3 seconds to enter the pairing mode. Press the ● button to move to the zone then press the ♪ button to select the melody required. Press the ● button until the pairing mode is exited.

**Battery low indicator**

If a zone LED light is blinking, it indicates that the battery is low for this transmitter. You must replace the battery as soon as possible. If the receiver beeps every 5 seconds, this indicates the receiver batteries are low. You must replace the batteries of the receiver.

## SOUND SENSOR

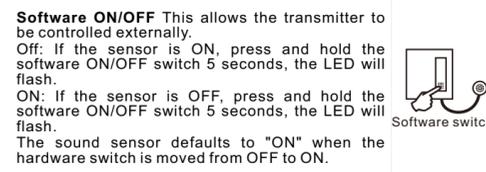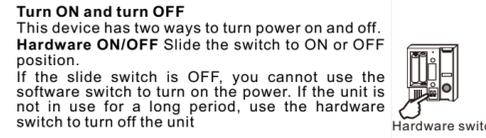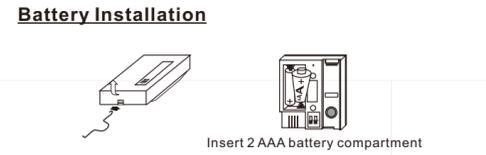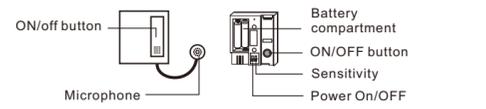

**Software ON/OFF** This allows the transmitter to be controlled externally.

**Off:** If the sensor is ON, press and hold the software ON/OFF switch 5 seconds, the LED will flash.

**ON:** If the sensor is OFF, press and hold the software ON/OFF switch 5 seconds, the LED will flash.

The sound sensor defaults to "ON" when the hardware switch is moved from OFF to ON.

## Code Matching & Melody Selection

The sound sensor works with the receiver (chime) and must be paired prior to use.


**Step 1:** Insert batteries in the sensor to be used.

**Step 2:** Insert batteries in the receiver to be used.

**Step 3:** Enter pairing mode for receiver (chime unit). Press and hold the zone selector button ● 3 seconds. The LED #1 will flash.

**Step 4:** Press the ● button again to move to the zone you want to pair with. Press ♪ melody selector to scroll through the melodies. Once you hear your preferred melody, do not press again as it is now selected.

**Step 5:** Switch on the sensor and speak into the microphone, the red LED indicator will light. If successful, the receiver will generate a short tone. Press the ● button to exit pairing mode, the system is ready to use.

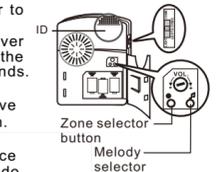


**Operation**

1. Open the cover.
2. Slide the power to the ON position.
3. Select the desired sensitivity low, mid, or high, this sets the level of sound required to trigger the transmitter.
4. Stick the microphone to the device you want to detect.

**Code Conflict**


If the sound sensor coding and another transmitter is the same, you must change the code of the sound sensor.

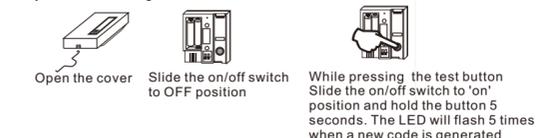


When you have changed the code of the sound sensor you will then need to re-pair the sound sensor with the receiver.

## TELEPHONE SIGNALER

### Part & Function

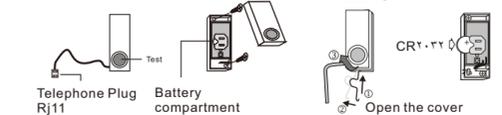


### Battery installation

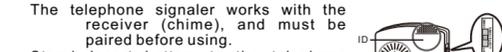

### Code Matching & Melody Selection

- The telephone signaler works with the receiver (chime), and must be paired before using.
- Step 1: Insert battery to the telephone transmitter.
  - Step 2: Insert batteries to the receiver (chime).
  - Step 3: Enter pairing mode for receiver (chime unit). Press and hold the zone selector button 3 seconds. The LED #1 will flash.
  - Step 4: Press the button again to select zone with the telephone icon. Press melody selector to scroll through the melodies. Once you hear the telephone sound, do not press again as it is now selected.
  - Step 5: Once you have selected the zone and sound, press the test button on the telephone signaler once. If successful, the receiver will generate a short tone. Press the button to exit pairing mode it is now ready to use.

### Operation

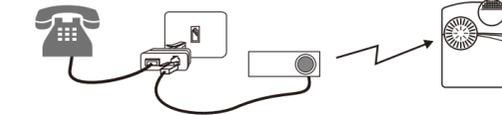

Plug the telephone line into the telephone socket as the diagram. The system is ready to use.

## Code Conflict


If the telephone signaler coding is the same as another transmitter you must change the code. When you have changed the code re-pair the telephone signaler.




Press and hold the test button, insert the battery whilst holding the button for 5 seconds. The LED will flash 5 times when a new code is generated

## MAGNETIC SENSOR

### Parts and Function

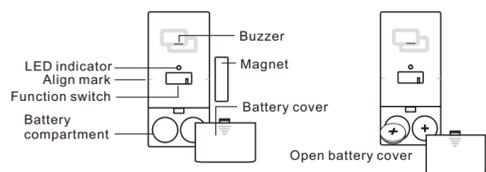

### Battery Installation

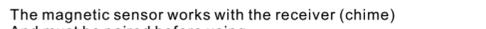

### Code Matching & Melody Selection

- The magnetic sensor works with the receiver (chime) and must be paired before using
- Step 1: Insert batteries to the sensor.
  - Step 2: Insert batteries to the receiver (chime).
  - Step 3: Enter pairing mode for receiver (chime unit). Press and hold the zone selector button 3 seconds. The LED #1 will flash.
  - Step 4: Press the button again to move to the zone you want to pair with. Press melody selector to scroll through the melodies. Once you hear your preferred melody, do not press again as it is now selected.
  - Step 5: Once you have selected the zone and melody, trigger the magnetic sensor by holding the sensor and magnet together, then move them apart.

If successful, the receiver will generate a short tone. Press the button to exit pairing mode, the system is now ready to use.

## Installation

Install two CR2032 batteries to the battery compartment. Remove the back paper of the double sided tape on the back of the unit. Stick the alarm unit to the window/door frame and the magnet unit to the door/window by the side of the alarm unit.



### Alarm Mode


The alarm sound will automatically turn off within 15 seconds and sound again 30 seconds later if the door or window does not close.

### Bell Mode:


The bell will generate a Ding Dong tone and sound again 30 seconds later if the door does not close.

## SENSOR PAD TRANSMITTER

### Part & Function

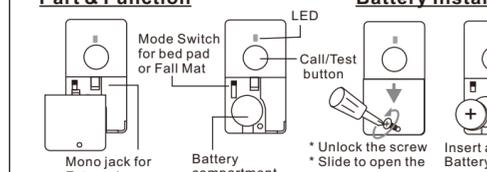

### Battery Installation

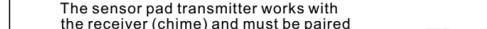


### Code Matching & Melody Selection

- The sensor pad transmitter works with the receiver (chime) and must be paired before using.
- Step 1: Insert battery to the sensor.
  - Step 2: Insert batteries to the receiver (chime).
  - Step 3: Enter pairing mode for receiver (chime unit). Press and hold the zone selector button 3 seconds. The LED #1 will flash.
  - Step 4: Press the button again to move to the zone you want to pair with. Press melody selector to scroll through the melodies. Once you hear your preferred melody, do not press again as it is now selected.
  - Step 5: Once you have selected the zone and melody, trigger the sensor pad transmitter by press the test button.

If successful, the receiver will generate a short tone. Press the button to exit pairing mode, the system is now ready to use.

## Code Conflict

If the sensor pad transmitter coding is same as another transmitter, you must change the code. When you have changed the code, re-pair the sensor pad transmitter.

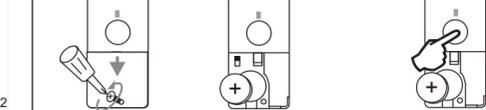


## Setting

- Open the battery cover and slide the switch to pad or mat position
- Mat: for fall mat (normal open)  
 Pad: for Bed pad or chair pad (normal close)  
 +3S: Pad mode with 3 seconds delay  
 +10min: Pad mode with 10 minutes delay.

## OPERATION Connection


1. open the battery cover
2. Connect the pressure pad to the transmitter
3. close the battery cover

## Mat

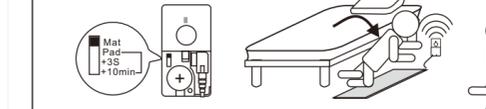

The transmitter will send out the alert signal to the receiver, when someone steps on (falls on) the mat

## Pad

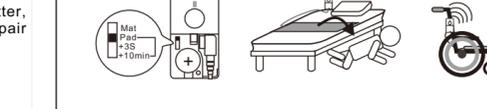

When the patient has left the mat, the transmitter will send an alert signal to the receiver.


## Pad Delay Mode

To prevent false trigger, you can slide the mode switch to Pad + 3S or Pad + 10min position. When the sensor is triggered, The timer will start. When the timer is over, the sensor will send the alert signal to ring the receiver. Pressing the Call/Test button once will stop the timer after trigger. This means the sensor will return to standby mode and does not ring the receiver.

\*\* The sensor pad transmitter can be connected to other type of sensor such as a switch.

## Using as a call button


1. Open the battery cover
2. Push the Lanyard into the gap
3. Pull the Lanyard to hold on the column
4. Close the battery cover

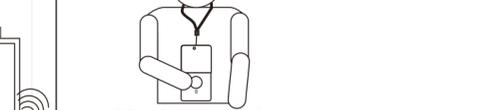

When the person needs help press the call button once.

## PIR SENSOR

### Part & Function

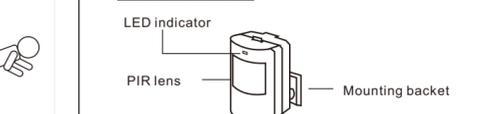

### Battery Installation



### Code Matching & Melody Selection

- The PIR sensor works with the receiver (chime) and must be paired before using
- Step 1: Insert battery to the sensor.
  - Step 2: Insert batteries to the receiver (chime).
  - Step 3: Enter pairing mode for receiver (chime unit). Press and hold the zone selector button 3 seconds. The LED #1 will flash.
  - Step 4: Press the button again to move to the zone you want to pair with. Press melody selector to scroll through the melodies. Once you hear your preferred melody, do not press again as it is now selected.
  - Step 5: Once you have selected the zone and melody, trigger the PIR sensor once. To trigger the sensor move your hand across the lens. If successful, the receiver will generate a short tone. Press the button to exit pairing mode, the system is now ready to use.

If successful, the receiver will generate a short tone. Press the button to exit pairing mode, the system is now ready to use.

## Test the Sensor

Insert the battery into the PIR detector, the PIR detector will start to detect motion automatically after 15 seconds. Walk to the front of the detector within 8m. Once the motion has been detected, the detector will send out a trigger signal to the receiver (chime) then go into a sleep mode for 10 seconds. During this time it will not detect motion.



**Hearing Products International Limited**  
 Echo House, 26/27 Haigh Park, Stockport, SK4 1QR, England  
 Tel. +44 (0) 161 480 8003  
 Fax +44 (0) 161 480 8006  
[www.hear4you.com](http://www.hear4you.com)

**Hearing Products International Ltd. reserve sole right to alter prices, design and/or technical specifications or colours without prior notice. E & O. E. 06/2016 V2**  
**Echochime300TM Instructions.**

© Copyright Hearing Products International limited 06/2016 V2

UK: Waste electrical products and batteries should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities see [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or Hearing Products International Limited for full details [www.hear4you.com](http://www.hear4you.com).

