

Magic fixing User Manual

Model:GS571

The magic fixing offer a real alternative to fastening with screw and dowel plugs. Smoke alarms can be mounted quickly and cleanly with this magnetic assembly system.

ASSEMBLING

1. Assembling the ceiling element

The ceiling element (without magnets) has to be mounted on a correct place as described in your smoke alarm's instruction manual. Remove the protective foil (a) and place it against the ceiling. Apply light pressure (b) for at least 10 seconds. Please note it is mounted on a stable, dry and free of dust and grease area. Once assembled the magnet cannot be removed or repositioned.

2. Assembling the smoke alarm element

The smoke alarm element (with magnets) is mounted on the base of the smoke alarm. Remove the protective foil (a) and place the it against the base. Apply light pressure (c) for at least 10 seconds.

3. Assembling the smoke alarm to the ceiling


The base of the smoke alarm is simply placed against the ceiling element (d). To remove the smoke alarm do not pull down vertically but slide it sideways of the ceiling element.



(a)



(b)

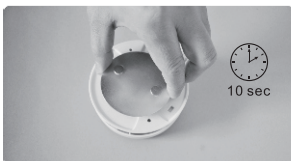

(c)



(d)